




# ZAP

## ISTRUZIONI BA410

La zanzariera è già predisposta per un vano finestra da  $L = 140 \text{ cm}$   $H = 160 \text{ cm}$

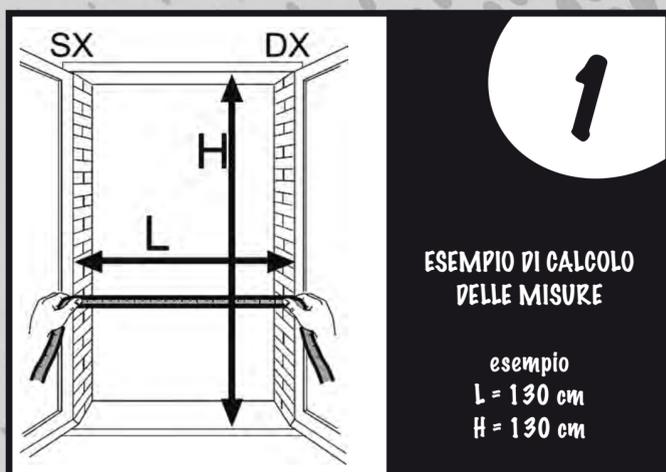

$$140 - L = T_1 \quad (\text{esempio: } 140 - 130 = 10 \text{ cm})$$

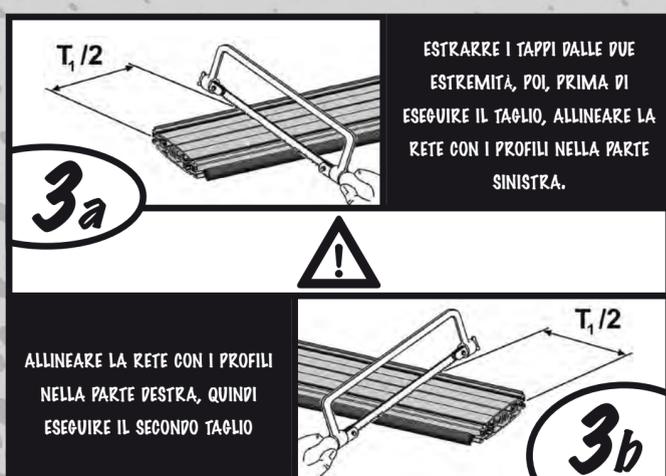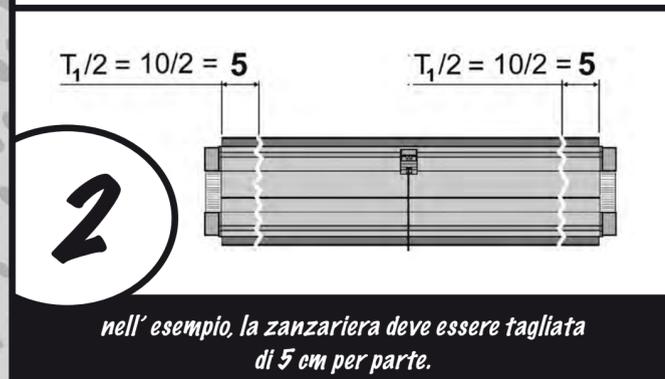

$$160 - H = T_2 \quad (\text{esempio: } 160 - 130 = 30 \text{ cm})$$

